

LED UNDERCABINET PUCK

3580LED-PL3WHT-C 3580LED-PL3NKL-C

QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) / 1-800-567-2513 (French) Monday through Friday 8:00 AM to 5:00 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:












SAFETY PRECAUTIONS:


This fixture is equipped with a polarized plug (a plug having one blade wider than the other). This plug will fit in a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, reverse the plug. If it still will not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.

PACKAGE CONTENTS


140E 0011E110		
PART	DESCRIPTION	QTY
Α	LED pcuk light	3
В	Plug	1
С	on/off switch	1
D	6' cord	1
Е	6' extension cord	1
F	Wire clips	6
G	Screw	9

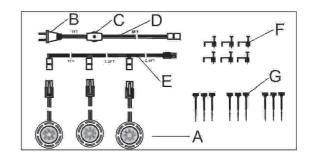


INSTALLATION: OPTION #1 - SURFACE MOUNT

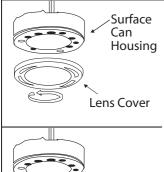

Remove lens cover by twisting counter-clockwise.

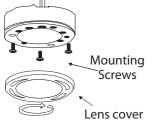


 Attached puck to mounting surface with 3 mounting screws (included).
 Replace lens cover.

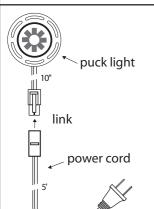

- Link puck with power cord Secure cord to mounting surface using wire clips included.
 - Plug cord into power outlet.

OPTION #2 - RECESSED

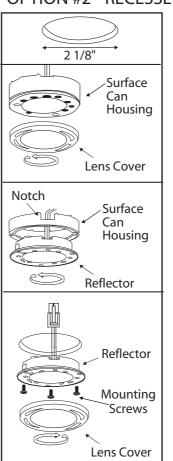

- Drill a 2 1/8" hole in the underside of the cabinet
- Remove lens cover by twisting counter-clockwise.
- To remove the housing cover lift cord up from notch and twist the reflector counter-clockwise.

Discard housing.

- 4. Feed cord through drilled hole and push puck snugly into place. Secure with 3 mounting screws (included). Replace lens cover.
- Link puck with power cord. Plug cord into power outlet. (see step 3 in surface mount instruction)

Optional hardwire kit (sold separately).

