# Assembly Instruction Sheet #IS-9913P19-3 For Style 9913P19-3

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses Light Source: (3) Candelabra Base Bulbs 60W Maximum (Not Include).

Estimated Assembly Time: 20-30 minutes

**Preparation:** Identify and Inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

### ▲ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### Package Contents

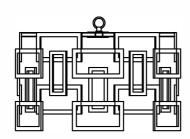

A Fixture Body x1

## **Hardware Contents**

PART	DESCRIPTION			QUANTITY
AA	Ca	anopy Lo	ck Ring	1pcs
BB	W	îre nut		Зрсв
CC	Canopy Chain Loop			1pcs
DD	Crossbar			1pcs
EE	Outlet Box Screw			2pcs
AA	ВВ	CC	DD	EE
			- 0 <sup>-</sup>	

#### STEP 1 - Install the Canopy Chain Loop and Nipple.

- A. Thread the nipple into the crossbar. Thread the lock washer and the hex nut onto top end of the nipple. Do not tighten at this moment.
- B. Attach the crossbar to the outlet box and secure with outlet box screws (not included). Hand tighten until snug.
- C. Thread the canopy chain loop onto the end of the nipple and hand tighten until snug. Place the ceiling canopy over the canopy chain loop against the ceiling to determine the correct position of the nipple. Thread the canopy lock ring onto the canopy chain loop. Adjust the nipple to allow the ceiling canopy to rest against the ceiling when held in place by the canopy lock ring.
- D. Remove the canopy lock ring from the canopy chain loop and remove the ceiling canopy. Unscrew outlet box screws to remove the crossbar assembly. Tight the hex nut above the crossbar. And then reinstall the crossbar assembly to the outlet box.

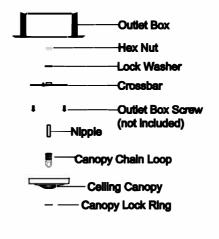


Figure 1