



# SUSPENDED CEILING MOUNT LIGHT

B-4  
07/10

## QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English)  
1-800-567-2513 (French)

Monday through Friday 8:00 AM to 5:00 PM E.S.T.

## TOOLS AND MATERIALS REQUIRED:



Pliers



Wire Cutters



Blade  
Screwdriver



Phillips  
Screwdriver



Wiring supplies  
as required by  
electrical code



"INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS"  
"READ ALL INSTRUCTIONS"


**"IMPORTANT SAFETY  
INSTRUCTIONS"**  
**"SAVE THESE INSTRUCTIONS"**

## SAFETY PRECAUTIONS:


1. **TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.**
2. **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
3. **CONNECT THE GROUND WIRES (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.**
4. **WARNING: DO NOT REMOVE KNOT IN CORD (STRAIN RELIEF PROTECTION). IF CORD REQUIRES SHORTENING THEN RE-INSTALL KNOT.**
5. **DO NOT ADJUST CORD LESS THAN 6" BETWEEN CEILING AND THE TOP OF THE SHADE OF THE FIXTURE.**

**NOTE: Product May Not Look Exactly As Shown In Diagrams. Bulbs Are Not Included.**


## INSTALLATION:

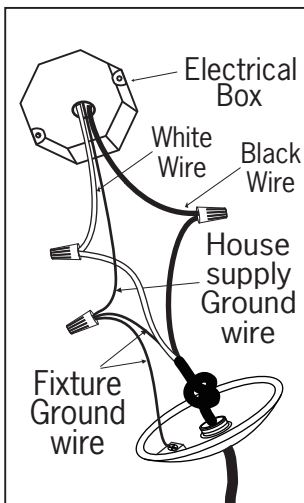

1. Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical outlet box. Connect white wire from light fixture to white wire in outlet box. Connect black wire from light fixture to black wire in outlet box.

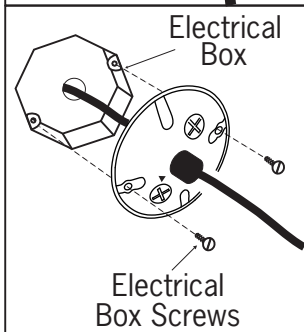

2. Once connections of wires are completed, carefully tuck wires and wire nuts into the outlet box making sure no bare wire (on the black and white) is visible at the wire nuts. Tighten the outlet box cover to the electrical box using the electrical box screws.

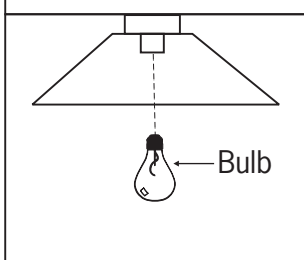

3. Install specified bulb (not included).