


# CHANDELIER




QUESTIONS OR CONCERNS CONTACT CANARM AT: 1-800-265-1833 (English) / 1-800-567-2513 (French)

Monday through Friday 8:00 AM to 5:00 PM E.S.T.



INSTRUCTIONS SAVE THESE INSTRUCTIONS

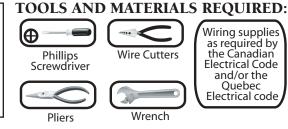


## **SAFETY PRECAUTIONS:**

- 1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 3. CONNECT THE GROUND WIRES (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX. NOTE: Product may not look exactly as shown in figures.

# **INSTALLATION:**

#### For " Up light" installation:

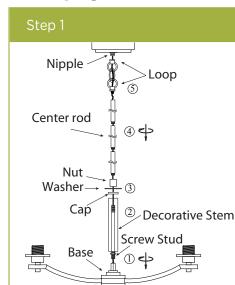

Install the screw stud onto the base.


Slide the decorative stem onto the screw stud.

Tighten the washer and cap against the assembly by the nut.

Screw the upper loop (with internal threads) to the nipple. Screw the rod to the lower loop (with external threads).


Install the length of rod(s) that is required by threading wire through the rod(s) and screwing it to the fixture.

#### Step 2

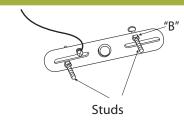


Loosen "B". Adjust stud to desired length and lock in place with "B".

#### Step 3

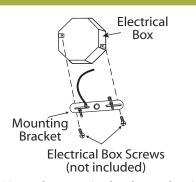

Mount the mounting bracket to electrical box using electrical box screws (not included). Make sure the studs on the mounting bracket are facing out from the electrical box.


#### Step 4

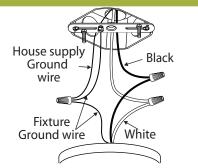


Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical outlet box. Attach the black wire (or wire marked "SPT-1") from the light fixture to the black wire in the electrical box. Attach the white wire from the light fixture to the white wire in the electrical box.



#### Step 6

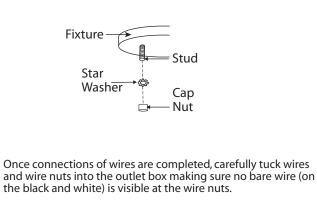


Tuck electrical wires into outlet box and position fixture over studs on mounting bracket assembly. Secure fixture in place with star washer(s) and cap nut(s).

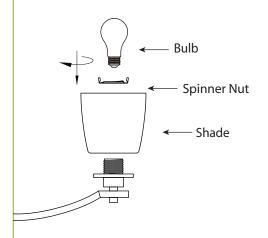


Remove spinner nut from socket. Position shade on lamp and secure with spinner nut. Install specified bulb type and wattage (not included).

### For "Down light" installation:

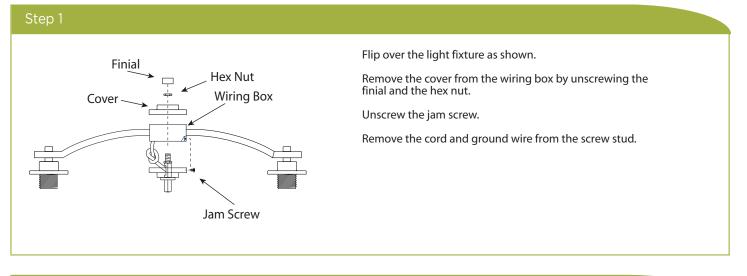

Step 2

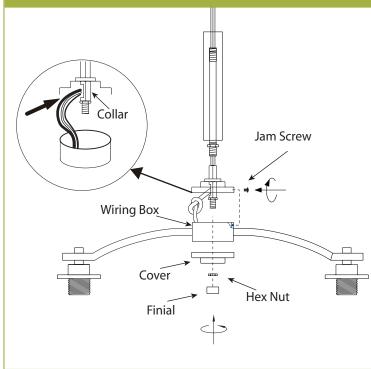

Put the cord and ground wire through the other side of the wiring box and route them through collar and screw stud.

Re-tighten the jam screw on the wiring box.

Install the cover by hex nut and finial.

Go to step 1 of the section  $\ensuremath{^{\prime\prime}}$  For up light installation" for further installation.

# Be careful NOT to damage the wires while installing the wire cover.

Imported By: CANARM LTD., 2157 Parkedale Ave., Brockville, Ontario, K6V 5V6, Tel: (613) 342-5424, Fax: (800) 263-4598