## Assembly Instruction Sheet #IS-1027P26-9 For Style 1027P26-9

Toois Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (9) E12 Candelabra Base Bulbs 60W Maximum (Not Include).


Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, Install, or operate the fixture. Contact customer service for replacement parts.

## ▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

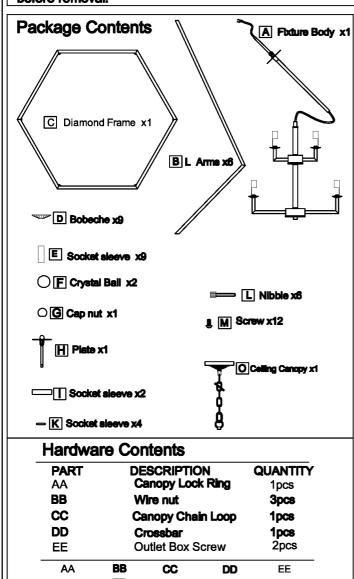

<del>=</del> 0#<del>=</del>

## STEP 1 -Install L Arms and Diamond Frame to Fixture Body.

A.Screw up the Central Rod into the Fixture Body(A) B.Connect the L. Arms(B), Fixture Body(A) and Plate(H) with Screw(M) but please don't tighten them.

- C.Put the Diamond Frame(C) into the six L Arms(B), then adjust the arms to six corner place. Line up the holes on the Diamond Frame(C) and the holes on the L Arms. Use the Nibble(L) to fix them together, tighten the Screw(M).
- D. Thread the Socket Coover(I), the Socket Coover(K) and Crystal Ball(F) thrioght the Nibble inorder. Then used loop to fix them together.

