





# Assembly Instruction Sheet #IS-1032P18-9-S For Style 1032P18-9

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire stripper, electrical tape, safety glasses.  
**Light Source:** (2) 60-40W Incandescent/LED bulbs.  
**Estimated Assembly Time:** 30-40 minutes  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams later to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


**⚠ Warnings and Cautions**  
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

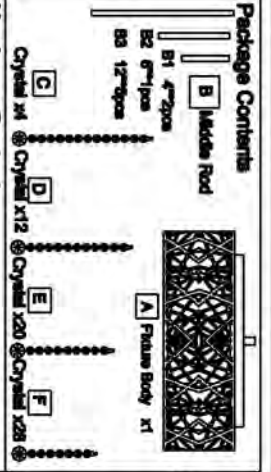


PART	DESCRIPTION	QUANTITY
AA	Decorative Caps	20PCS
BB	Electrical Leads	3PCS
CC	Outlet Box Screw	2PCS
DD	Mounting Screw	2PCS
EE	Mounting bracket	1PCS

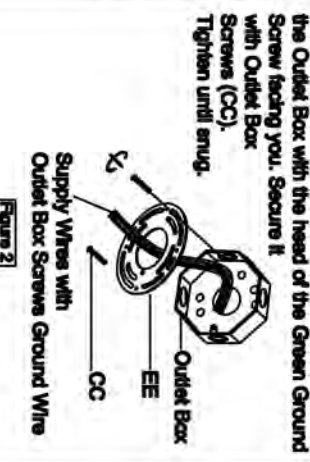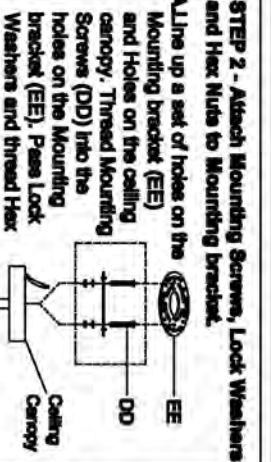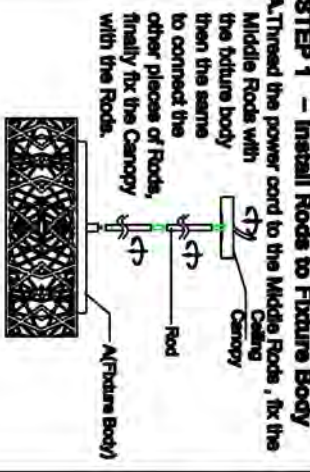


**STEP 4 - Fit Ceiling Canopy to Mounting bracket Assembly**  
 A. Fit the ceiling canopy to mounting screws (DD) and secure with Decorative Caps (AA). Note: The ceiling canopy should be snug against the ceiling and the Decorative Caps (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Decorative Caps (AA) and ceiling canopy and proceed to Step 5.

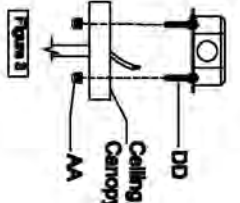

**STEP 5 - Wire Connections**  
 A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

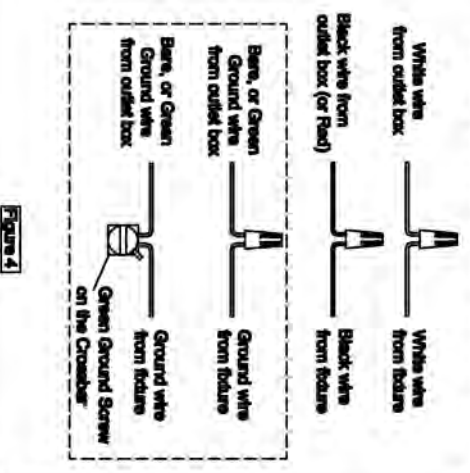

**STEP 6 - Install Ceiling Canopy to Ceiling**  
 A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand tighten until snug.

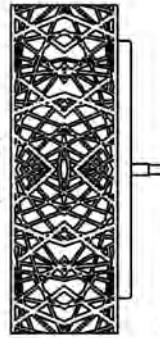

**STEP 7 - Install Crystal and Bulbs.**  
 A. Install bulbs (Not include) onto sockets and push snug into place.  
 B. Please put the crystal (1) (2) (3) (4) to the Fixture Body (A).

