
For Style 1112P24-7 Assembly Instruction Sheet #IS-1112P24-7

ad screediter, Philips screediter, plans, who callers, who etippers, electrical tape, safety glasses and electric Base Bulbs 60W Machinam (Not Include).

it. If any parts are missing or dam sect all parts before beginning trabalishon. Check poolings content tet and diagrams below to be save all parts healing or diamaged, do not attempt to assemble, traball, or operate the findum. Contact customer service for

Warnings and Cautions


um off electricity at circuit breaker or main fuee box before installation. Consult a licensed electrician if in doubt eee instructions are provided for your safety. It is very important you read them completely before installing the ture. We strongly recommend that a licensed, professional electrician perform the installation. sconnect fidure from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool

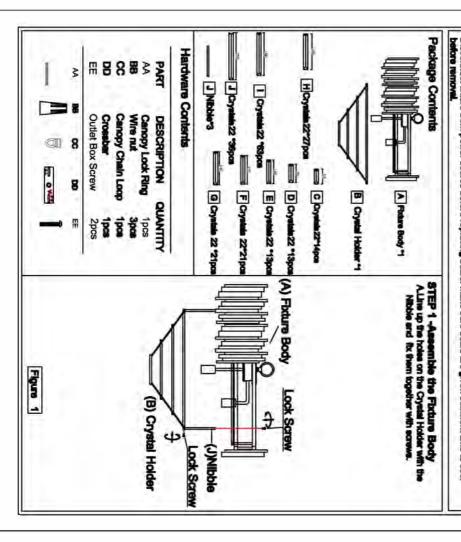

8TEP 2— Install the Carropy Chain Loop and Niggle
A.Thread the ripple into the crossion: Thread the bot washer and
the hax nut onto top and of the niggle. Do not fighten at this momen

B. Attach the crossbar to the outlet box and secure with outlet box screws (not included). Hand tighten until enug.

C.Thread the campy chain loop onto the and of the nixple and hand lighten until anut, Place the calling campy over the campy chain loop against the celling to determine the correct position of thereigns. Thread the campy both ring onto the campy drain loop. Adjust the nixple to allow the calling campy to rest against the calling when ripple to allow the calling campy to rest against the calling when

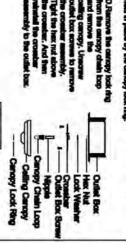

STEP 3 - Install the Fixture Chain and Colling Canopy Figure 2


B. Pull the supply wires through the focus chain alternating links.

quick link. Lift the fixture and fixture chain up and attach the other end of the fixture chain onto the clampy chain I cop will When the wires are through the findure chain, pull the supply wires and the ground wire through the camppy lock ring and the on one end of the flicture chein to the flicture loop with one

E. Go to Step 4 for v vire connections and follow the directions

F. Raise the osting canopy over the campy chain loop. Tighten the campy lock **SupplyODWines** Canopy Lock Ring Fodure Log

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully staff at the connected wires into the Outlet Box. STEP 4 - Wire Connections White wire from outlet box White wire from thouse

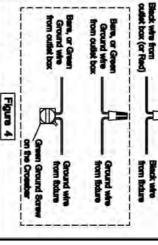

STEP 5 - Install crystal and Buibs.

A. Install buibs onto sockets and push arug into place

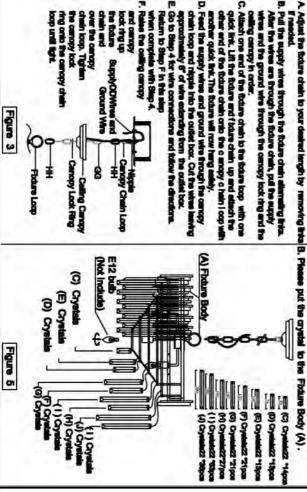


Figure 3