
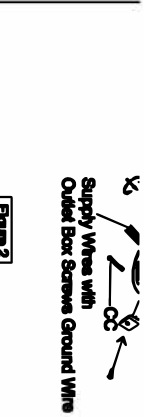



制图	审核
审核	版次
	A/0

EE	Mounting Screws	Size	
DD	Lock Nuts	Size	
DD	Washers	Size	
AA	Canopy	Part No.	

STEP 1 – Attach Mounting Screws, Lock Washers and Hex Nuts to Canopy
 A. Line up a set of holes on the Canopy (EE) and Hole on the ceiling canopy. Thread Mounting Screws (DD) into the holes on the Canopy (EE). Pass Lock Washers and Thread Hex Nuts onto the Mounting Screws (DD). Hand tighten until snug.

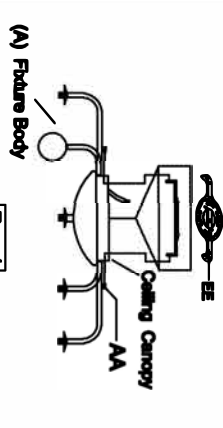

STEP 3 – Fit Ceiling Canopy to Creeper Assembly .
 A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Screw (AA). Note: The ceiling canopy should be snug against the ceiling and the Screw (AA) if not adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Creeper (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Screw (AA) and ceiling canopy and proceed to Step 4.

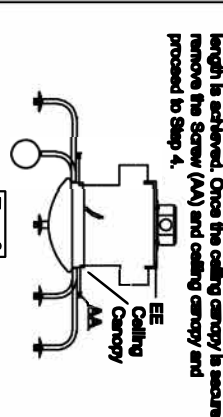

STEP 4
 A. Carefully tuck all ceiling canopy of Align the holes in Screws (DD). Be snug.

