


制图	审核
审核	版次
	A/0

EE	Mounting Screws	8mm	4
DD	Lock Nuts	8mm	4
DD	Washers	8mm	4
AA	Canopy	8mm	1


**STEP 1 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossover**

A. Line up a set of holes on the Crossover (EE) and holes on the ceiling canopy. Thread Mounting Screws (DD) into the holes on the Crossover (EE). Pass Lock Washers and Thread Hex Nuts onto the Mounting Screws (DD). Hand tighten until snug.

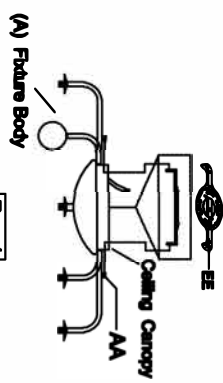

**STEP 3 – Fit Ceiling Canopy to Crossover Assembly .**

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Screw (AA). Note: The ceiling canopy should be snug against the ceiling and the Screw (AA) if not adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Crossover (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Screw (AA) and ceiling canopy and proceed to Step 4.

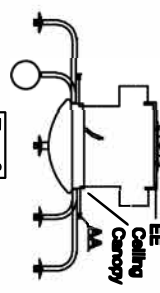

A. Carefully tuck all ceiling canopy of Align the holes in Screws (DD). Be snug.

