For Style 1153P10 Assembly Instruction Sheet #IS-1153P10

is Required: Fishead acrewdriver, Philips acrewdriver, plism, wire outliers, wire shippers, electrical lupe, safety glass loures: (1) 8UGGESTED LED GO BULB WXX2W (Not include).

rd Assembly Time: 15-30 minutes


siton: Identity and impact all print bettre beginning installation. Check package content let and diagrams below to be sure all parts are L If any parts are missing or demagad, do not ellempt to assemble, Install, or operate the ficture. Context customer service for replaceme

Warnings and Cautions

We strongly recommend that a licensed, profe 'um off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. e instructions are provided for your safety. It is very important you reed them completely before installing the toture tional electrician perform the installation.

Disconnect fluture from power source before replacing buibs. Make sure buibs are given sufficient time to cool before removal.

ling bracket to Outlet Box

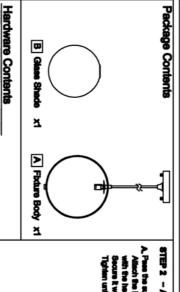

A. Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box Supply Wires with Outlet Box Screws Ground Wire Figure 2 Outlet Box ႘

STEP 3 — Fit Calling Canopy to Mounting bracket Assess

A. Fit the Ceilling Campy to Mounting Screws (XX) and secure with Decorative Caps (AA), Note: The Ceilling Campy should be snug against the ceilling and the Decorative Caps (AA). Mounting bracket (EE) until the correct length is achieved. Once the Ceiling Campy is secure, remove the Decorative apa (AA) and Calling Canop (DD) in creat of the iling Canopy ġ ⋛

A. Line up a set of holes on the and Hex Nuts to Mounting bracket

Jt(EE) and Hote

Mounting Screws (DD)

ing Canopy

STEP 1 — Attach Mounting Screws, Lock Washers

H ġ

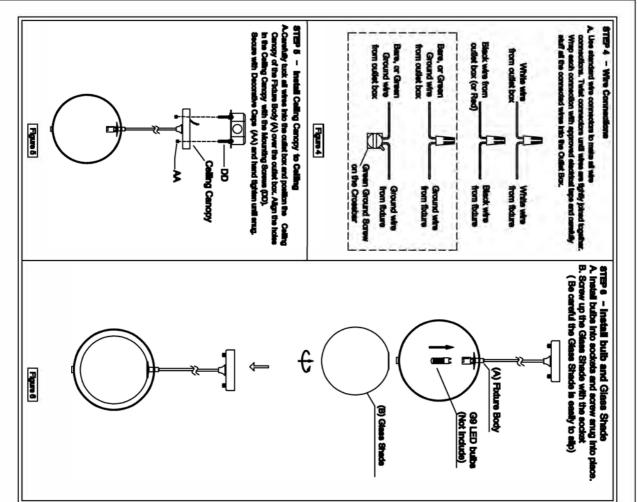


Figure 1

Figure 3