ASSEMBLE INSTRUCTION
8001P42C

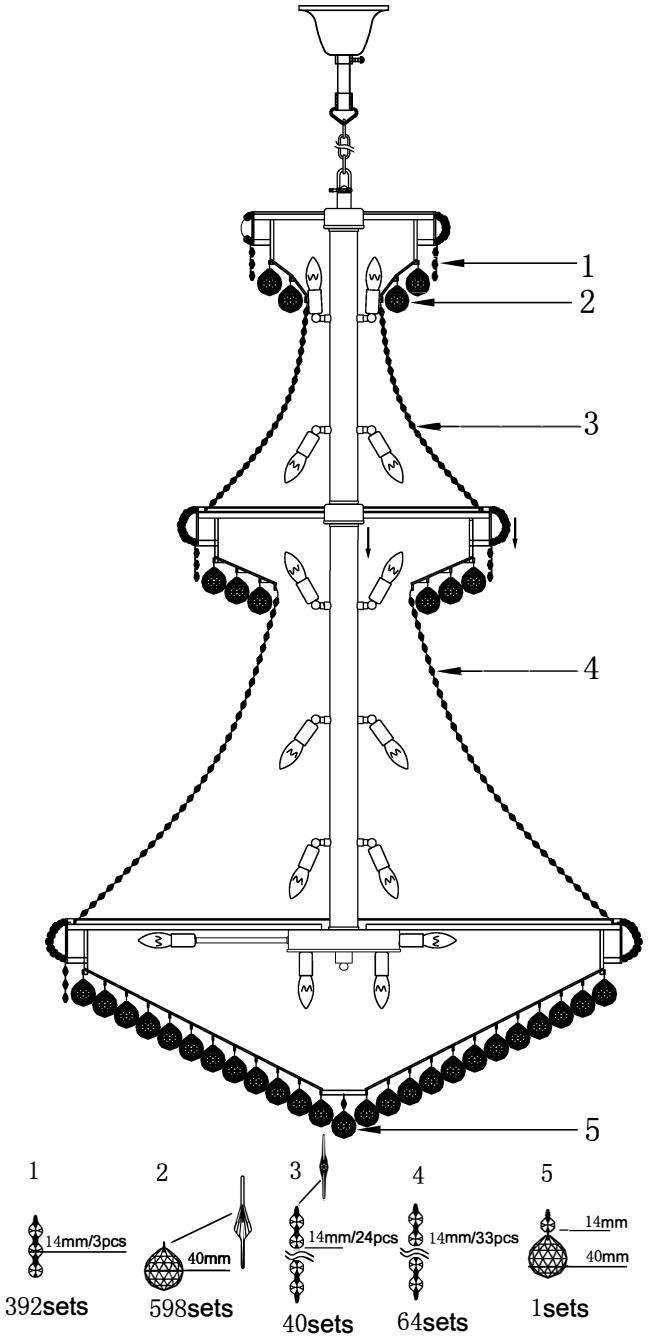

ASSEMBLE INSTRUCTION
8001P42C

110V E12 BULB 32*60W

1. Thread the wire lead through C pipe then through H pipe then lock the C pipe bottom end with H of the A layer, then put D layer into C pipe to connect the wire like B (Connect 3 groups wire:wire lead+ A layer wire +D layer wire)

2. Thread E cover through C pipe top end to match with D pipe; then thread F cover through C pipe top end to match with G layer sockets; Thread the wire lead through C pipe top end then through G layer then through E cover then through H , after that use H lock the wire lead then thread it through G layer and E cover which is on the top end of C pipe.

3. Thread the transparent power cord through J pipe then thread the bottom end of the wire through H;then lock J pipe with H ; and then put K pipe through J pipe to connect the wire like I (connect 3 groups wire: power cord+ wire lead+ K layer wire)

4. Thread the E cover through J pipe top end to match with K pipe; then thread the F cover through J pipe top end to match with the sockets of L layer;then thread the transparent power cord of J pipe through L layer ,put one end to go through the I-iron and M ring then lock with J pipe top end.

5. At last , lock N buckle with M ring, thread the transparent power cord through the chain, the rob and the canopy to fix the wire in the ceiling.
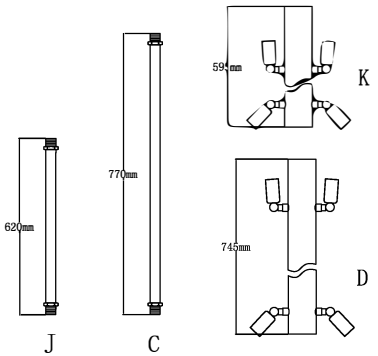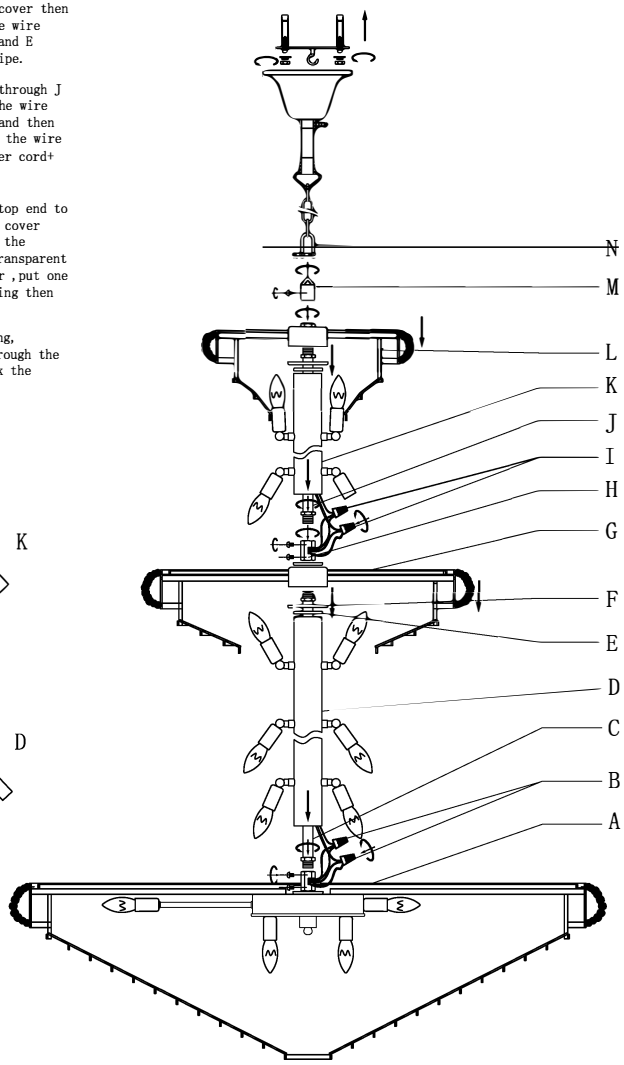
ϕ42″*H72″