


LED DISK LIGH OUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) / 1-800-567-2513 (French) Monday through Friday 8:00 AM to 5:00 PM E.S.T.

1/14

LED-SM6D






SAFETY PRECAUTIONS:

- 1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 3. CAUTION RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT

BRANCH CIRCUIT CONDUCTOR.

OPTION #1: FLUSH MOUNT

PART	DESCRIPTION	QTY
Α	LED disk light	1
В	Mounting bracket (use with option #2)	1
С	Springs (use with option #2)	2
D	E26 lamp holder (use with option #2)	1
Е	Quick connector (use with option #2)	1
F	Mounting screws	2
G	Wire nut	2

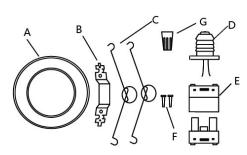


Pliers

THIS LED light is suitable to be dimmed by LUTRON # CTCL-153PD

Electrical Outlet Box Prior to installation, install mounting screws into the junction box. Do not drive screws completely to the end of the junction box. Mounting Screws Connect supply wires to wires on fixture with wire nuts or push wires into Ouick Connector. Connect Black white to white, black to black, and copper wire to copper wire as Ground grounding connection. White ${\tt 3}$. With the lens off of fixture, attach disk light to mounting screws, turn fixture counter-clockwise to lock. Tighten screws to firmly Disk light hold the fixture in place. 1 **4.** Complete the installation by twisting the lens on the disk light. Disk light 🔨 Lens

OPTION #2: RETROFIT A RECESSED CAN

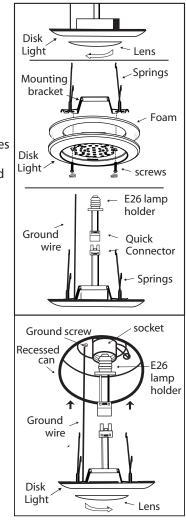

Prepare fixture for recessed installation.

- Remove lens by twisting counter-closkwise
- Place springs on mounting bracket then attach mounting bracket to disk light with screws
- Insert wires into Quick Connector. Black to black and white to white.
- 2. Attach ground wire to ground screw in recessed can.

Turn E26 lamp holder into socket base.

Connect Quick Connectors

Tuck all wires into recessed can. Squeeze springs and push up into recessed can. Twist lens onto disk light.